


FLOORGRAFIX DISPLAY INSTRUCTION SHEET

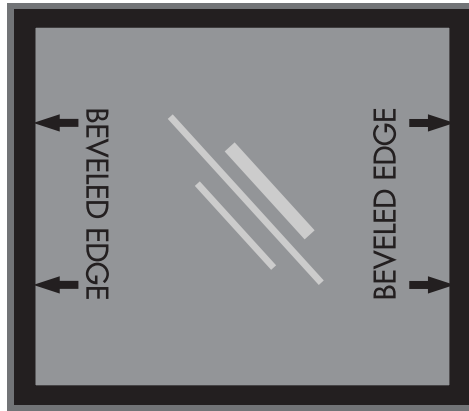

REMOVE

REPLACE

Grasp top and side of display as shown below.

Using both hands push black frame back with thumbs to release the acrylic from the beveled edge.

